



# 风琴折叠页 70G书写纸 黑白印刷 折叠后尺寸: 100x140mm



## User Manual



**AMS512a-H6**  
5.1 CH SOUND BAR

### Important Safety Instructions

**WARNING:** To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference
2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor, household use only.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product in the immediate vicinity of water such as bathtubs, washbaths, swimming pools etc. where the likelihood of immersion or splashing occur.
6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
10. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
11. Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
13. For safety reasons, do not remove any covers or attempt to access the inside of the product.
14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
15. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
16. Do not expose the batteries to excessive heat, direct sunlight, fire or similar.
17. Do not throw used batteries in your household rubbish. Dispose of it responsibly according to local regulations.

### Remote Control Description

Using the remote control:

- 1. POWER**  
Turns on the Sound Bar or sets it to standby mode.
- 2. RLF+**  
Press this button to increase the volume of the left and right channels.
- 3. RLF-**  
Press this button to decrease the volume of the left and right channels.
- 4. VOL+**  
Press to increase the volume
- 5. RLF-**  
Under Bluetooth and USB mode, press this button will go to previous song.
- 6. VOL-**  
Press to decrease the volume
- 7. SRL+**  
Press to increase the satellite speaker volume
- 8. MODE**  
short Press this button briefly to switch the mode  
Long Press for reset function
- 9. 3.1.2/5.1.2**  
Press this button to switch between 3.1-channel and 5.1-channel sound systems.
- 10. MUSIC**  
Press this button will enter MUSIC mode sound effect.
- 11. MOVIE**  
Press this button will enter MOVIE mode sound effect.
- 12. MUTE**  
Short Press to Mute/Unmute the audio  
Long Press this button to pair the soundbar boom with the subwoofer
- 13. Bass-**  
Press to decrease the bass levels
- 14. Bass+**  
Press to increase the bass levels
- 15. PAIR**  
Press to play/pause music  
Long Press and hold this key to disconnect Bluetooth or Bluetooth pairing.
- 16. RTF+**  
Under Bluetooth and USB mode, press this button will go to next song.
- 17. RTF+**  
Press this button to increase the volume of the center speaker.
- 18. SRL-**  
Press to decrease the satellite speaker volume
- 19. LTF-**  
Press this button to reduce the volume of the center speaker.
- 20. NEWS**  
Press this button will enter NEWS mode sound effect.

### Front/Back panels

#### FRONT

- 1. POWER**  
Press this button to power on or power off
- 2. II**  
Short press to play/pause music  
Long Press the button to change mode.
- 3. RLF-**  
Under Bluetooth and USB mode, press this button will go to previous song.
- 4. RTF+**  
Under Bluetooth and USB mode, press this button will go to next song.
- 5. -VOL+**  
Adjust the volume knob.

#### BACK


- 1. AUX**
- 2. USB**
- 3. OPTICAL**
- 4. HDMI/ARC**
- 5. AC IN 110V-240V**
- 6. Right Satellite output**
- 7. Left satellite output**

### Connection schematic

#### CONNECTING THE SOUNDBAR TO TV


1. Subwoofer
2. Connection to TV: HD Input on the sound bar to HD(ARC) Output on TV

Note: Alternatively you can use the AUX cable (included) to connect the 'AUX-IN' port on the sound bar to the Auxiliary out or the Headphone jack on the TV.

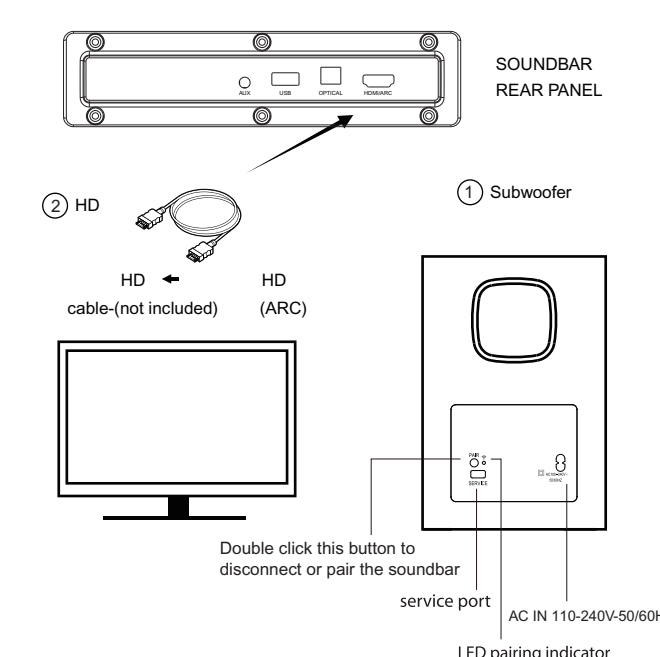

### CONNECTING THE SOUNDBAR TO OTHER DEVICES

3. OPTICAL input on the sound bar to OPTICAL Output of other devices (Blu-ray/DVD player/Gaming consoles).
4. Other audio sources: Blue-connect/AUX-IN.

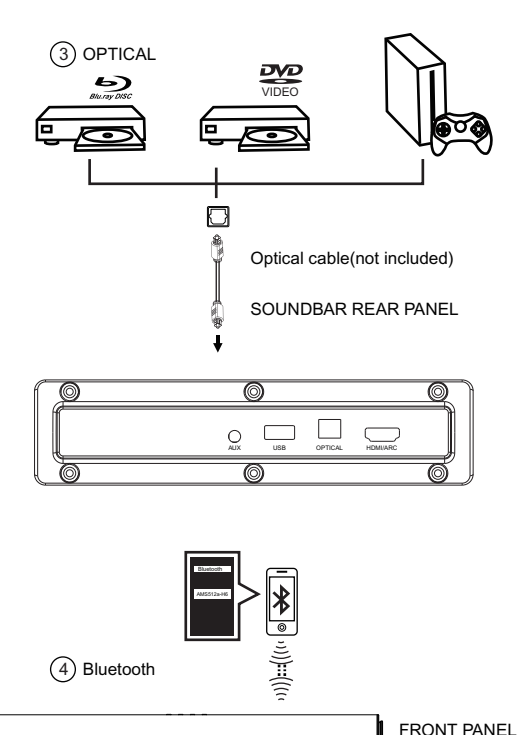

### Operating Instructions:

With AC power connected to the Speaker, the display glows with prompt voice, which means that successfully power on. Long Press the Power/Mode button on the side panel or the Mode key on the remote control to choose the required mode.

#### Pairing the subwoofer

This soundbar and subwoofer in the same gift box will be automatically pairing when it is on.  
If there is no pairing do as follows:

#### Pairing by MUTE key on Remote Control:

1. Plug the soundbar and the subwoofer into the main socket at same time.
2. Press STANDBY key to turn the soundbar ON after it has been connected to main socket. Then press MODE key to set the soundbar in Bluetooth (BLUE) status (keep soundbar disconnected from any other Bluetooth).
3. Long Press MUTE key to pair the soundbar with the subwoofer. The red indicator light on the back of the subwoofer will stay solid if pair in successfully.
4. The soundbar and subwoofer will pair automatically after the first successful pair, even if they are switched off and on.

#### Manual Pairing

If the PAIR button on the back of the subwoofer is accidentally pressed, the subwoofer will proactively disconnect from the soundbar (the red indicator light on the back of the subwoofer will flash). Double-click the PAIR button on the back of the subwoofer to reconnect it to the soundbar (the red indicator light on the back of the subwoofer will stay solid).

### Blue-Connect Mode:

1. Press the MODE button repeatedly until Blue-Connect Mode is selected. Display shows 'BT'
2. On your Bluetooth-enabled device choose 'AMS512a-H6', the name of the sound bar. The display blinks indicating that it is waiting for pairing, once pairing is successful, the indicator remains on, display shows 'BT' and stop flashing.
3. Now you can play music from your Bluetooth-enabled device on the sound bar. Press the RLF- or RTF+ button on the remote control to play the previous or next song.

#### Aux Input

If using the Aux cable connect the Speaker to audio equipment, select 'AUX' by using the Mode key on the remote control or the Power/Mode key on the side panel. 'AUX' will be displayed on the display accompanied by 'AUX' prompt.

#### HDMI/ARC


If using HDMI/ARC cable connect Speaker to audio equipment, through the mode button on the remote control or the Power/Mode key on the side plate to select 'ARC', screen displays 'ARC' accompanied by 'ARC' prompt.

#### OPTICAL Input

If using OPTICAL cable to connect speaker, through the mode button on the remote control or the Power/Mode key on the side plate to select 'OPT', screen displays 'OPT' accompanied by 'OPT' prompt.

### Connection schematic

#### RECOMMENDED PLACEMENT

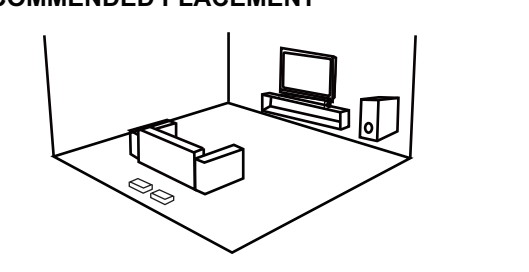

**Soundbar:** Under the TV (if wall-mounted) in front of the TV  
**Sub-woofer:** on the floor, alongside the TV (or in the front corner of the room)  
**Surround speaker:** Place it behind you to the left and to the right

Speaker Specification	
Soundbar Rated Power	190W
Sub-woofer Rated Power	110W
Input Voltage	AC 110-240V-50/60Hz
Power consumption	300W
Input signal source	Optical/AUX terminal/Bluetooth/HDMI/ARC OUT
Dimensions for sound bar	960*118*73mm
Dimensions for subwoofer	240*240*380mm
Surround speaker	180*76*99mm
ACCESSORIES:	Remote control, Audio line, mountable screws, manual