


风琴折叠页 70G书写纸 黑白印刷 折叠后尺寸: 100x140mm



AMS
User Manual
AMS51a-H6
5.1 CH SOUND BAR

Important Safety Instructions

WARNING: To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference
2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor household use only.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product in the immediate vicinity of water such as bathtubs, washbaths, swimming pools etc. where the likelihood of immersion or splashing occur.
6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
10. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
11. Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
13. For safety reasons, do not remove any covers or attempt to access the inside of the product.
14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
15. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
16. Do not expose the batteries to excessive heat, direct sunlight, fire or similar.
17. Do not throw used batteries in your household rubbish. Dispose of it responsibly according to local regulations.

 
Remote Control Description

Using the remote control:

1. **POWER**
Turns on the Sound Bar or sets it to standby mode.
2. **⏏**
Press to Mute/Unmute the audio
3. **VOL+**
Press to increase the volume
4. **VOL-**
Press to decrease the volume
5. **MI/RESET**
Press to start, play, or pause in BT mode, long press the button for 2 seconds to reset the volume level, and switch to the movie mode.
6. **BASS-**
Short press to decrease the bass levels
Long press this key to play the previous song
7. **BASS+**
Short press to increase the bass levels
Long press this key for the next song
8. **Input**
Press to switch between Bluetooth, USB, AUX-in/HDMI(ARC-in), and optical-in mode
9. **PAIR**
Press to disconnect the connected device and turn the soundbar into Bluetooth pairing mode
10. **SRL-**
Press to decrease the satellite speaker volume
11. **SRL+**
Press to increase the satellite speaker volume
12. **M**
Press to enable "Music" mode
13. **M**
Press to enable "Movie" mode
14. **N**
Press to enable "NEWS" mode
15. **⏮**
Press this key to select the switching between Channel 2.1 and Channel 5.1


Front/Back panels

FRONT



1. **POWER**
Long press for 3 sec to power ON/OFF
2. **Mode**
Short press to play/pause music
Long press the button to change mode
3. **⏮**
Press this button to switch to Bluetooth mode when in another mode; hold down this button to disconnect from Bluetooth or the Bluetooth connection.
4. **-**
Long press this key to reduce the volume
Short press this key is the previous song
5. **+**
Long press this key to increase the volume
Short press this key is the next song

 BACK

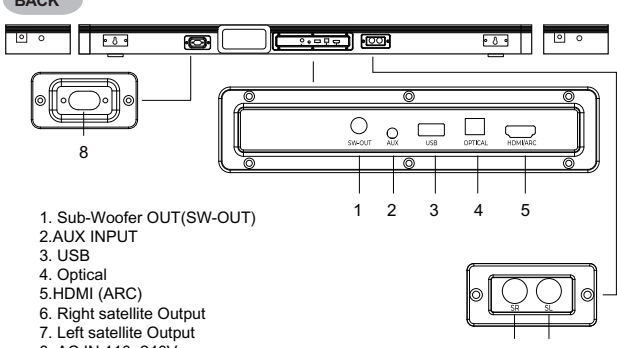


1. Sub-Woofers OUT(SW-OUT)
2. AUX INPUT
3. USB
4. Optical
5. HDMI (ARC)
6. Right satellite Output
7. Left satellite Output
8. AC IN 110~240V

Connection schematic

CONNECTING THE SOUNDBAR TO TV


1. Sub-woofer to SW. OUT
2. Connection to TV: HD Input on the sound bar to HD(ARC) Output on TV

 Note: Alternatively, you can use the AUX cable (included) to connect the 'AUX-IN' port on the sound bar to the Auxiliary out or the Headphone jack on the TV.

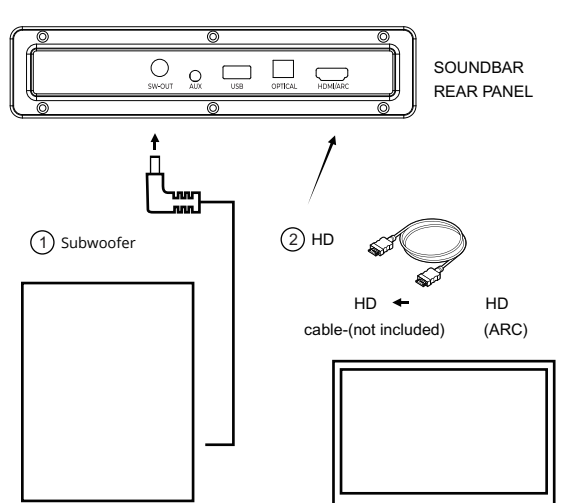

CONNECTING THE SOUNDBAR TO OTHER DEVICES

 3. OPTICAL input on the sound bar to OPTICAL Output of other devices(Blu-ray/ DVD player/Gaming consoles).
4. Other audio sources: Blue-connect/AUX-IN.

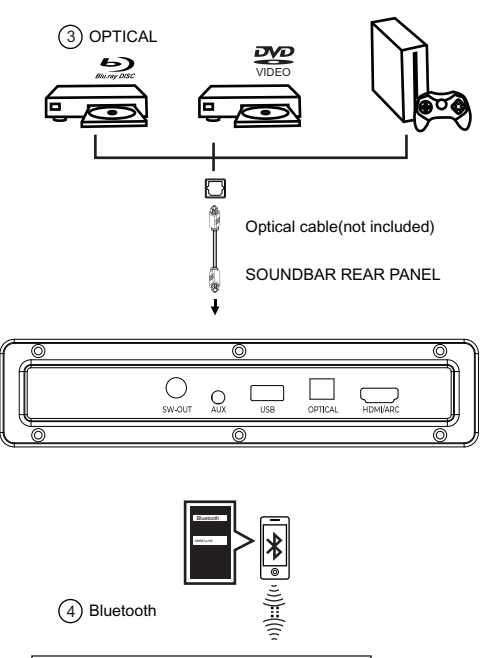

Operating Instructions:

With AC power connected to the Speaker, the display glows with prompt voice, which means that successfully power on. Long press the Power/Mode button on the side panel or the Mode key on the remote control to choose the required mode.

Blue-Connect Mode:

1. Press the 'MODE' button repeatedly until Blue-Connect Mode is selected. Display shows 'BT'
2. On your Bluetooth-enabled device choose 'AMS51a-H6', the name of the sound bar. The display blinks indicating that it is waiting for pairing, once pairing is successful, the indicator remains on, display shows 'BT' and stop flashing.
3. Now you can play music from your Bluetooth-enabled device on the sound bar. Press the **⏮** or **⏭** button on the remote control to play the previous or next song.

Aux Input

If using the Aux cable connect the Speaker to audio equipment, select 'AUX' by using the Mode key on the remote control or the Power/Mode key on the side panel. 'AUX' will be displayed on the display accompanied by 'AUX' prompt.

HDI/ARC Input

 
If using HDI/ARC cable connect Speaker to audio equipment, through the mode button on the remote control or the Power/Mode key on the side plate to select 'ARC', screen displays 'ARC' accompanied by 'ARC' prompt.

OPTICAL Input

If using OPTICAL cable to connect speaker, through the mode button on the remote control or the Power/Mode key on the side plate to select 'OPT', screen displays 'OPT' accompanied by 'OPT' prompt.

Connection schematic

RECOMMENDED PLACEMENT

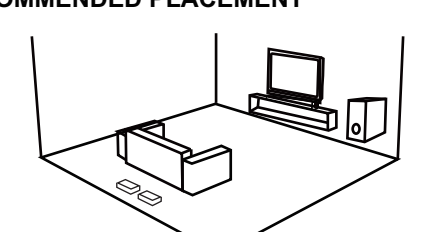

Soundbar: Under the TV (if wall-mounted) in front of the TV
Sub-woofer: on the floor, alongside the TV (or in the front corner of the room)
Surround speaker: Place it behind you to the left and to the right

Speaker Specification	
Soundbar Rated Power	150W
Sub-woofer Rated Power	100W
Input Voltage	AC 110-240V~50/60Hz
Power consumption	250W
Input signal source	Optical/AUX terminal/Bluetooth/HDI/ARC
Dimensions for sound bar	960*61.5*90mm
Dimensions for subwoofer	240*240*380mm
Surround speaker	175*61.5*90mm
ACCESSORIES:	Remote control, Audio line, mountable screws, manual